

CUSTOM IN-EAR MONITORS



Congratulations on the purchase of your Ears4U custom in-ear monitors. You can comfortably enjoy a perfect sound-quality due to the individually customized fit. Because of the high quality balanced technique, the smallest details are audible and the various instruments well definable.

To ensure optimal sound quality, it is recommended that you regularly check your ears for blockages by consulting your doctor. Also the in-ear monitors need some maintenance. You can read more about maintainace inside this userguide.

CUSTOM IN-EAR MONITORS

www.ears4u.nl | info@ears4u.nl

WARNING SOUND VOLUME

Make sure you read all warnings and instructions before using the Ears4U monitors. Always turn down the volume on your device before inserting the Ears4U monitors in your ears. Once the in-ear monitors are brought in, gradually increase the volume to an average noise level. The use of monitors at high volumes can permanently damage your hearing. When there is a beep in your ears or other discomfort, it shows that the music volume is too high. Read the following guidelines for the maximum time exposure to sound pressure levels before hearing damage occurs.

Geluidsniveau in dB

85 dB	90 dB	95 dB	100 dB	105 dB	110 dB	115 dB
8 uur	4 uur	2 uur	1 uur	30 min	15 min	7,5 min

Maximale blootstelling in tijd

WARRANTY CONDITIONS

Production errors, breakage of the external shell and failure of the internal components are covered for a period of two years from the date of purchase. Damage or breakage caused by use contrary to the operating instructions by Ears4U, normal wear and tear, incorrect use, negligence, unauthorized repair, are not covered by the warranty.


For more information about warranty, please check

<https://www.ears4u.nl>




PLACING IN THE EAR

The in-ear monitors feature color coding: red for the right and blue for left. Place the in-ear monitors with the sound openings in your ear canal and the cord straight forward. Through a rotation backwards you can turn the in-ear monitors correctly in the ear.

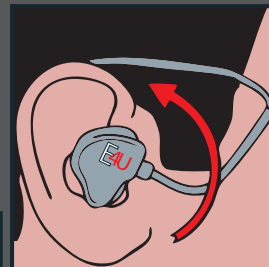


Check that the in-ear monitors also fits well at the top of the ear by pulling the top side of the ear upwards. If the monitors fit well it gives a comfortable feeling. The cord can be bent tightly over the ear. If the in-ear monitors are not comfortable or after some time you start getting pain, please contact info@ears4u.nl.

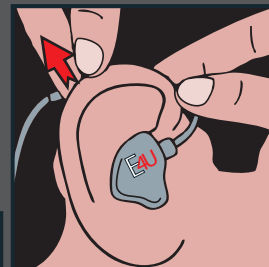


CABLE

When reconnecting the cables to the in-ear monitors you should ensure that the cables are properly connected. On the connectors on the cables have letter markings. These should match the monitor side.

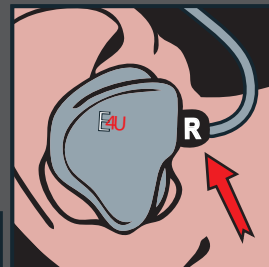

STORAGE

To make sure that the in-ear monitors remain undamaged, it is advisable to store them after use in the supplied storage box. Wrap the cord around your hand from the jack plug and put it in the storage box.

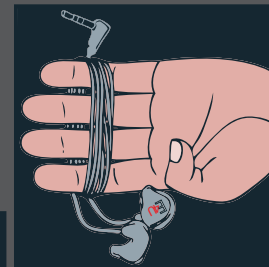

MAINTANANCE

Regularly check that the sound openings are free from pollution and ear wax. Any blockage can be removed using the provided bracket. The in-ear monitors are equipped with an antibacterial lacquering and can be cleaned with a damp cloth and possibly alcohol.

